

## PROFINET® Scanner EPXPN101

The EPXPN101 PROFINET Scanner is a PROFINET I/O device supporting S-1 PROFINET Simplex and S-2 PROFINET System redundancy. The network adapter is the head module for the RSTI-EP system bus, to which up to 64 active RSTI-EP modules can be connected. The PROFINET network adapter has two Ethernet ports, and an integrated switch.

The PROFINET Scanner can be accessed with a system-independent web server application via the USB service interface or the Ethernet. Thus, all information, such as diagnostics, status values and parameters, can be read and all connected modules can be simulated or forced.

The station's main power supply is integrated in the PROFINET Scanner. Power is supplied via two 4-pole connectors, separated into the input and output current paths.

Caution, the RSTI-EP station is usually installed on a horizontally positioned DIN rail. Installation on vertically positioned DIN rails is also possible. However, the heat dissipation is reduced such that the derating values change (refer to the section, [Thermal Derating](#)).

Modules should be allowed to de-energize for a minimum 10 seconds after power down, prior to starting any maintenance activity. The PROFINET Scanner cannot be hot-swapped.

Refer to the *RSTI-EP Slice I/O User Manual* (GFK-2958) for additional information.

Refer to the *RSTI-EP Power Supply Reference Guide*, a software utility available on PME V9.00, for detailed power-feed requirements.

### Module Features

- Supports up to 64 active RSTI-EP modules
- Supports PROFINET RT (only) for Redundancy and Non Redundancy mode
- Spring-style technology for ease of wiring
- DIN rail mounted
- Double-click installation for positive indication of correct installation
- Built-in Web Server (HTTP & HTTPS) for diagnostic information and firmware update through Ethernet and micro USB port
- Supports Type S2 System Redundancy operation
- Supports Media Redundancy Protocol (MRP) Client mode operation
- Support for daisy-chain/line, star, or ring (MRP) technologies
- Two switched Ethernet ports; 8-conductor RJ-45 shielded twisted pair 10/100 Mbps copper interfaces
- Fast start-up < 500 ms with a maximum of 10 modules



## Ordering Information

| Module    | Description   |
|-----------|---|
| EPXPNS101 | RSTi-EP Slice I/O PROFINET Network Adapter 2CU RJ45 PORTS |

## Specifications

| EPXPNS101  |   |  |
|--|---|--|
| <b>System data</b>                                     |   |  |
| Connection   | 2 x RJ-45   |  |
| Fieldbus protocol                                      | PROFINET Version 2.3 Class C I/O Device ( <b>RT Only</b> )  |  |
| PROFINET System Redundancy Support                     | Redundantly controlled operation conforms to PROFINET V2.3 Type S-2 System Redundancy   |  |
| Application Relations Supported                        | 1 Simplex AR or 1 SR-AR set made of 2 SR-ARs  |  |
| Number of Application Relations Supported              | 1 Simplex AR or 1 SR-AR set made of 2 SR-ARs  |  |
| Process image  | Input data width  | max. 512 bytes                           |
|  | Output data width   | max. 512 bytes                           |
|  | Parameter data  | max. 4362 bytes                          |
|  | Diagnostic data   | max. 1408 bytes                          |
| Number of modules                                      | max. 64 active  |  |
| Configuration interface                                | Micro USB 2.0   |  |
| Transfer rate  | Fieldbus  | Max. 100 Mbps                            |
|  | RTSi-EP system bus  | Max. 48 Mbps                             |
| Data format  | Default: Motorola   | Configurable: Intel                      |
| Status Bits  | 16 Input Status Bits  |  |
| PROFINET I/O Update Rate                               | Configurable selections: 1ms, 2ms, 4ms, 8ms, 16ms, 32ms, 64ms, 128ms, 256ms and 512ms   |  |
| Supports MRP   | Yes * [Min I/O Update Rate for bumpless operation in an MRP ring topology 128ms for Profinet System Redundancy configuration. For simplex system Min IO update rate for MRP bumpless operation is 8ms]  |  |
| <b>Supply</b>  |   |  |
| Supply voltage for system and inputs                   | 20.4V – 28.8V   |  |
| Supply voltage for outputs                             | 20.4V – 28.8V   |  |
| Max. feed-in current for input modules                 | 10 A  |  |
| Max. feed-in current for output modules                | 10 A  |  |
| Current consumption from system current path $I_{sys}$ | 116 mA  |  |
| <b>Connection data</b>                                 |   |  |
| Type of connection                                     | Spring style  |  |
| Conductor cross-section                                | Single-wired, fine-wired  | 0.14 – 1.5 mm <sup>2</sup> (AWG 26 – 16) |
| <b>General data</b>                                    |   |  |
| Operating temperature                                  | -20°C to +60°C (-4 °F to +140 °F)   |  |
| Storage temperature                                    | -40°C to +85°C (-40 °F to +185 °F)  |  |
| Air humidity (operation/transport)                     | 5% to 95%, noncondensing as per DIN EN 61131-2  |  |
| Width  | 52 mm (2.05 in)   |  |
| Depth  | 76 mm (2.99 in)   |  |
| Height   | 120 mm (4.72 in)  |  |
| Weight   | 220 g (7.76 oz)   |  |
| Configuration  | V2.3 GSDML file is available on the Support website <a href="http://support.ge-ip.com">http://support.ge-ip.com</a> for download and import into Proficy Machine Edition. The GSDML supporting a firmware release is part of the firmware upgrade kit available on the Support website. |  |

## LEDs

### LED Status Indicators

| LED    | Indication           | LED State/Description  |
|--------|----------------------|--|
| PWR    | Power LED            | <b>Green:</b> Supply voltage connected   |
| SF     | System fault         | <b>Red:</b> Configuration error, or error in the PROFINET Scanner, or error in a module, or there is a new diagnostic report<br><b>Red flashing:</b> Station in Force mode |
| BF     | Bus fault            | <b>Red:</b> No connection to the fieldbus<br><b>Red flashing:</b> Configuration error, no connection to the control unit, or error in the parameter set                    |
| MT     | Maintenance Required | <b>Yellow:</b> Error on the system bus or fieldbus   |
| LINK 1 | Connection           | <b>Green:</b> Connection established between port 1 of the PROFINET Scanner and another field device   |
| ACT 1  | Active               | <b>Yellow flashing:</b> Data being exchanged on port 1   |
| LINK 2 | Connection           | <b>Green:</b> Connection established between port 2 of the PROFINET Scanner and another field device   |
| ACT 2  | Active               | <b>Yellow flashing:</b> Data being exchanged on port 2   |

### LED Indicators

|  |  | LED          | EPXPNS101  |
|--|--|--------------|--|
|  |  | Power Supply | <b>Green:</b> Supply voltage > 18 V DC<br><b>Red:</b> At least one current path < 18 V |
|  |  |              |  |
|  |  |              |  |
|  |  |              |  |
|  |  |              |  |
|  |  |              |  |
|  |  | 3.1          | <b>Green:</b> Input current path supply voltage > 18 V DC                              |
|  |  | 3.2          | <b>Red:</b> Input current path supply voltage < 18 V DC                                |
|  |  | 3.3          |  |
|  |  | 3.4          | <b>Red:</b> Internal fuse defective  |
|  |  | 4.1          | <b>Green:</b> Output current path supply voltage > 18 V DC                             |
|  |  | 4.2          | <b>Red:</b> Output current path supply voltage < 18 V DC                               |
|  |  | 4.3          |  |
|  |  | 4.4          | <b>Red:</b> Internal fuse defective  |
|  |  |              |  |