 
 


Field Modification Kits

Pilot Devices

Selection

Push Buttons and Selector Switches	Class	Enclosure Type	Controller Size or (Lighting Rating)	Type	Catalog Number	List Price \$
 49SBPB5  49SBSB1  49SAP05  49SAS01	14, 40, LC, LEN, CLM ^①	Open	00-4	Start, Stop Push Buttons	49SAPB5	
				Hand-Off-Auto Selector Switch	49SASB1	
				Off-On Selector Switch	49SASB4	
		1	00-4 or (20–100A)	Start, Stop Push Buttons	49SBPB5	
				Hand-Off-Auto Selector Switch	49SBSB1	
				Off-On Selector Switch	49SBSB4	
			5-8 or (200–400A)	Start, Stop Push Buttons	49SAP05	
				Hand-Off-Auto Selector Switch	49SAS01	
				Keyed Hand-Off-Auto (key removable in all positions)	49SAS09	
		12, 4/4X	00-8 or (20–400A)	Off-On Selector Switch	49SAS04	
				Start, Stop Push Buttons	49SAP05	
				Hand-Off-Auto Selector Switch	49SAS01	
				Keyed Hand-Off-Auto (key removable in all positions)	49SAS09	
	22, 43	Open	00-4	Forward-Off-Reverse Selector Switch	49SASB2	
				Forward-Off-Reverse Selector Switch	49SBSB2	
				Forward, Reverse, Stop Push Buttons	49SAP02	
		12, 4/4X	0-8	Forward-Off-Reverse Selector Switch	49SAS02	
				Forward, Reverse, Stop Push Buttons	49SAP02	
				Forward-Off-Reverse Selector Switch	49SAS02	
	30 (2S1W)	Open	0-4	High-Off-Low Selector Switch	49SASB3	
				High-Off-Low Selector Switch	49SBSB3	
				High, Low, Stop Push Buttons	49SAP03	
		12, 4/4X	0-4	High-Off-Low Selector Switch	49SAS03	
				High, Low, Stop Push Buttons	49SAP03	
				High-Off-Low Selector Switch	49SAS03	
	30 (2S2W)	Open	0-4	High-Off-Low Selector Switch	49SASB3	
				High-Off-Low Selector Switch	49SBSB3	
				High, Low, Stop Push Buttons	49SAP03	
		12, 4/4X	0-4	High-Off-Low Selector Switch	49SAS03	
				High-Off-Low Selector Switch	49SAS03	
				High-Off-Low Selector Switch	49SAS03	
	17, 18, 36, 37, 83, 84, LED, LEF, LEB, CMN ^① , CMF ^① , CMB ^①	1, 12, 4/4X	0-8 (20-400A)	Start, Stop Push Buttons	49SAP05	
				Hand-Off-Auto Selector Switch	49SAS01	
				Keyed Hand-Off-Auto (key removable in all positions)	49SAS09	
		1, 12, 4/4X	0-8	Off-On Selector Switch	49SAS04	
				Forward, Reverse, Stop Push Buttons	49SAP02	
				Forward-Off-Reverse Selector Switch	49SAS02	
	25, 26	1, 12, 4/4X	0-4	High, Low, Stop Push Buttons	49SAP03	
				High-Off-Low Selector Switch	49SAS03	
	32	1, 12, 4/4X	0-4	High, Low, Stop Push Buttons	49SAP03	
				High-Off-Low Selector Switch	49SAS03	

① To be used for replacement of switch only. Does not include relay or extra contact block on 30-400A CLM and CM Lighting Contactors. Class 49SB not available for these devices.