

ZSM2204–138119 (Order no. 138119)

ZSM, LED, + and – buttons, stop command device

- ▶ 3-stage function
- ▶ Stop command device
- ▶ LED indicator
- ▶ Pushbuttons
- ▶ Coiled connecting cable, 5 m
- ▶ + and – buttons



3-stage function

Enabling function is active only in the second stage (center position, actuating point). If the pushbutton is released or pushed further (panic function), the enabling is removed (dependent on the wiring, see function sequence).

Stop command device

Dual-channel emergency stop device (red, with pull-to-reset and turn-to-reset button) on the switch housing, for different wiring concepts.

Upper position for rapid access in an emergency

LED indicator

The LED indicator is used for visual feedback directly at the enabling switch.


+ and – buttons

These pushbuttons can be configured individually. For example, for moving axes in the positive or negative direction.

Cable

The high-quality connecting cables are available in a coiled version.


Dimensional drawings

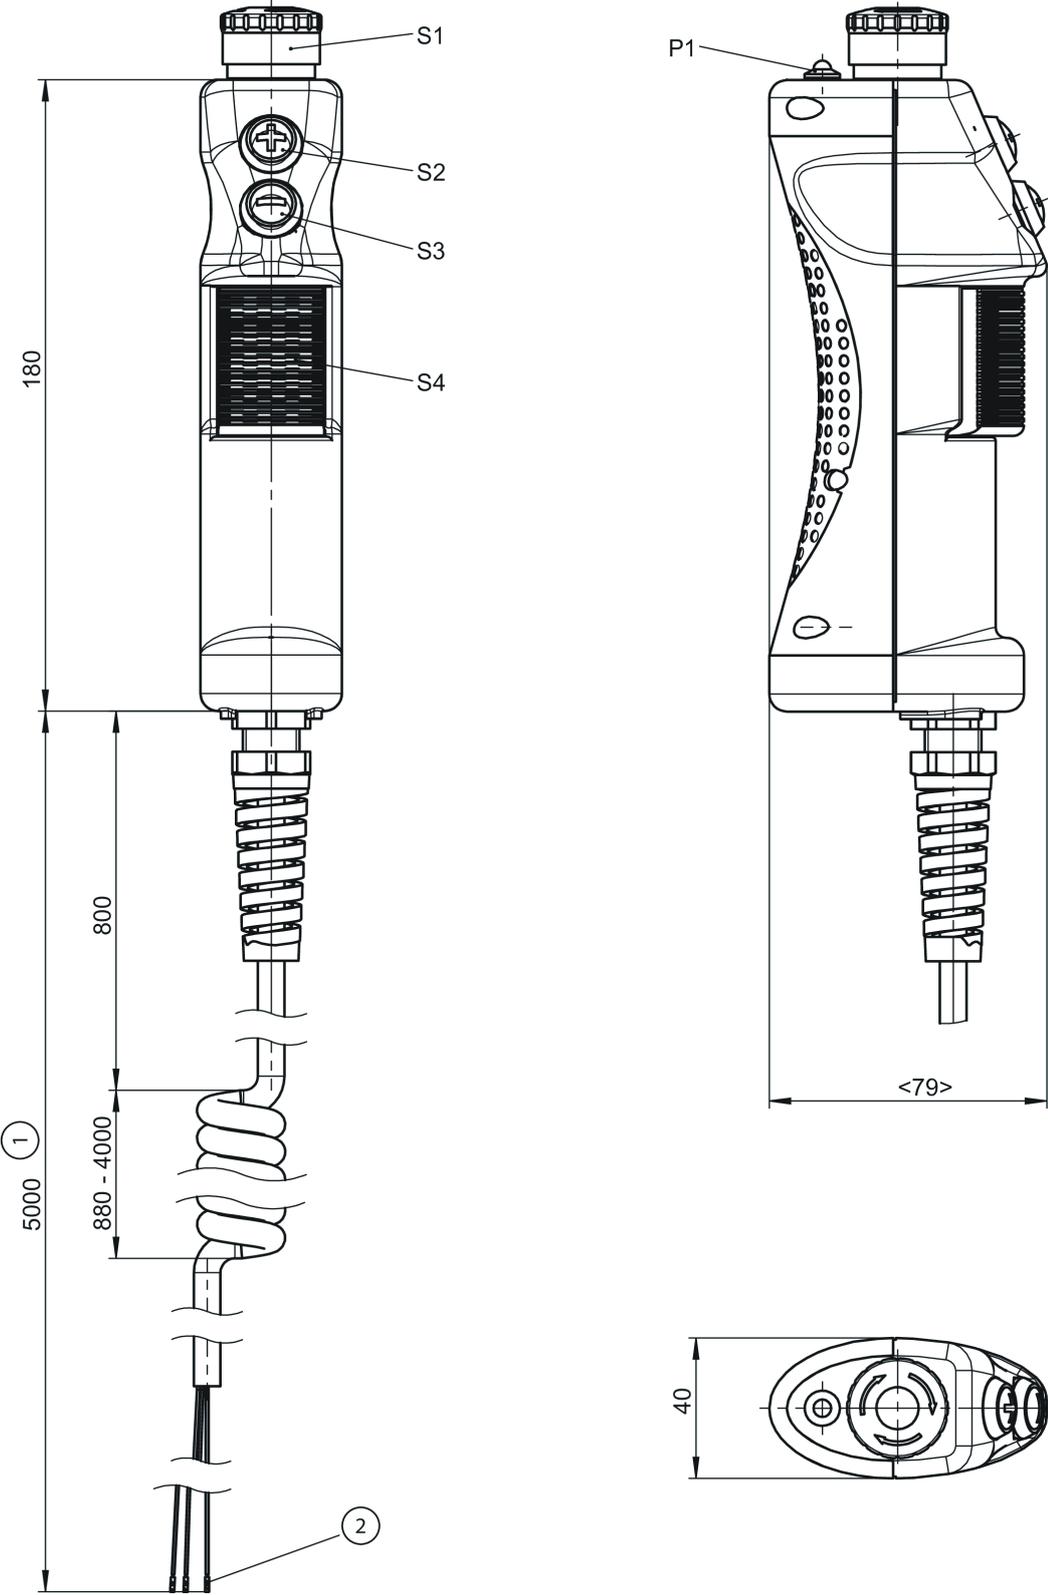

- 1 Cable length extended
- 2 Cable end sleeves

Connection examples

S1
NOT-HALT
emergency-stop

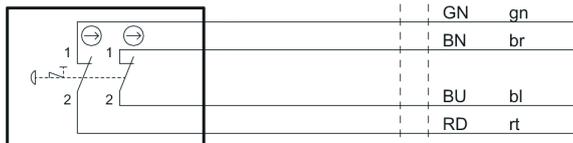

S2
Drucktaste "+"
push button "+"





S3
Drucktaste "-"
push button "-"



P1
LED gelb
LED yellow



S4
Zustimmtaster
enabling push button

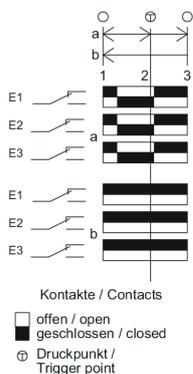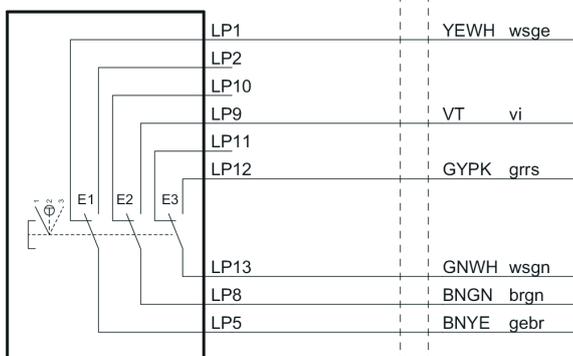

Adern nicht angeschlossen/
wires not connected:

GYWH wsgr
BNGY grbr
WHPK wsrs
BUWH wsbl
BNPK rsbr
BNBU brbl
RDWH wsrt

Schirm / shield

Adern 0,14² / wires 0,14²