

RPS2131PR300M (Order no. 094851)

Rope pull switch with pull-to-reset button for EMERGENCY STOP device, pull lug


- ▶ Plastic housing
- ▶ Emergency stop device with detent mechanism as per EN ISO 13850 and EN 60947-5-5
- ▶ Rope clamp for pull wire
- ▶ Indication of correct rope tension
- ▶ 3 cable entries M20 x 1.5
- ▶ Switching elements with 4 switching contacts
- ▶ Blue reset button



Switching element

2131 Slow-action switching contact 3 NC \rightarrow + 1 NO

Dimensional drawings

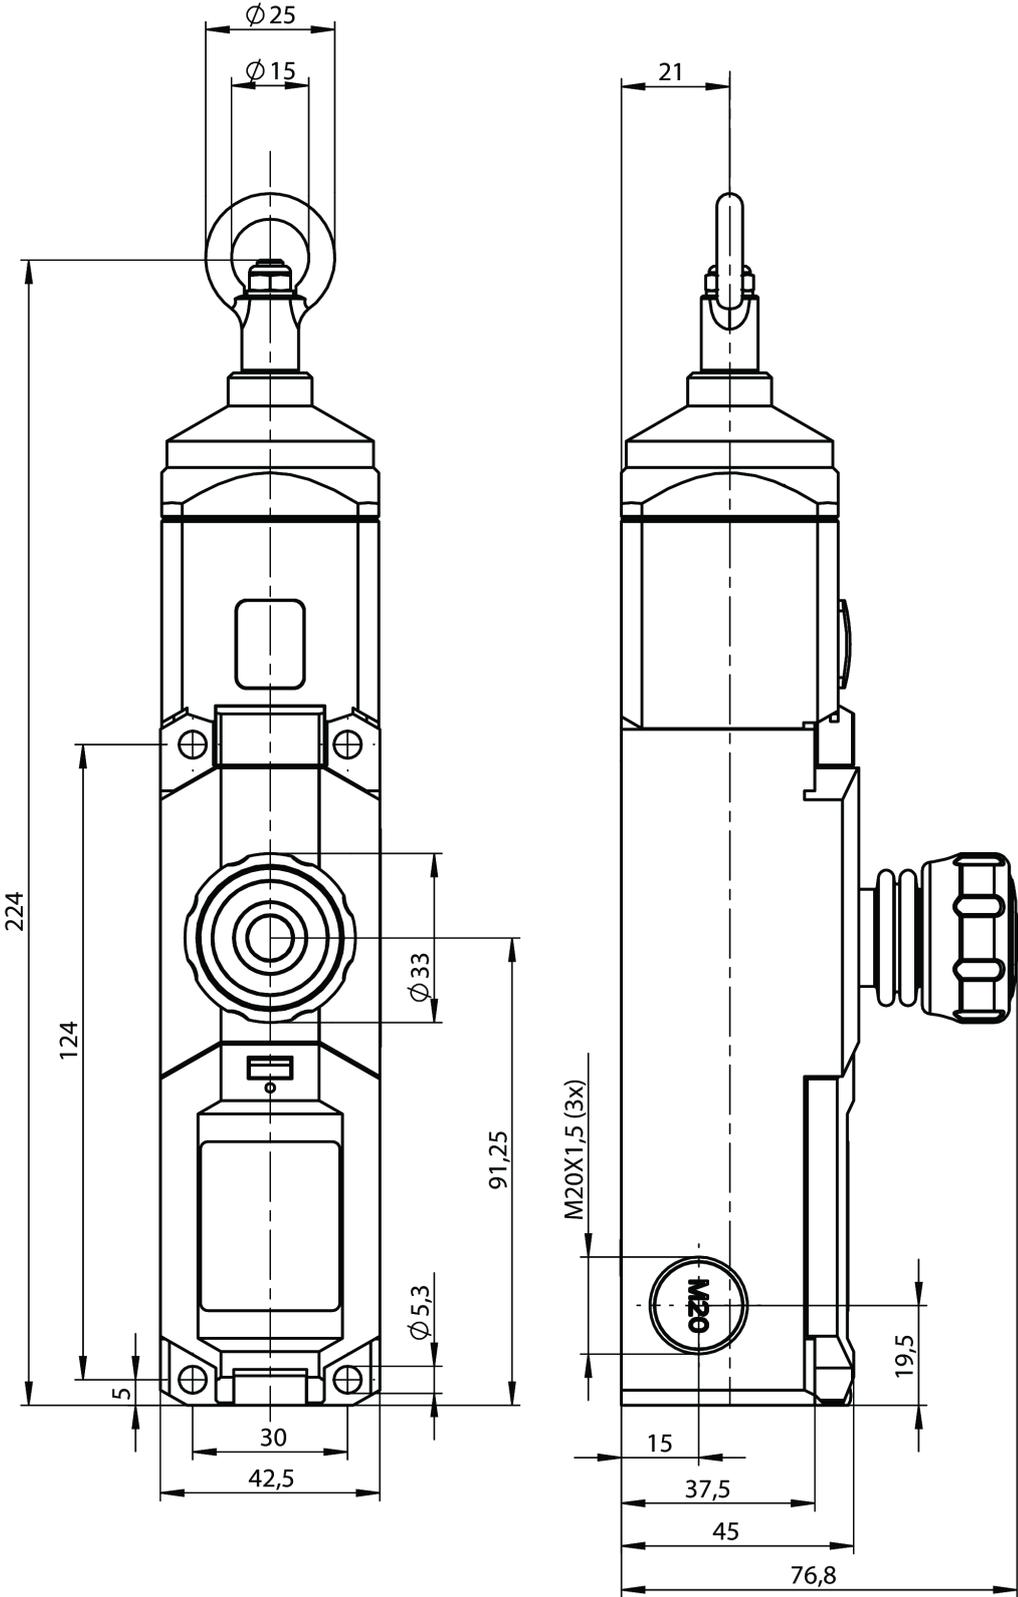

Connection examples

