RPS2131PR100M (Order no. 094849)

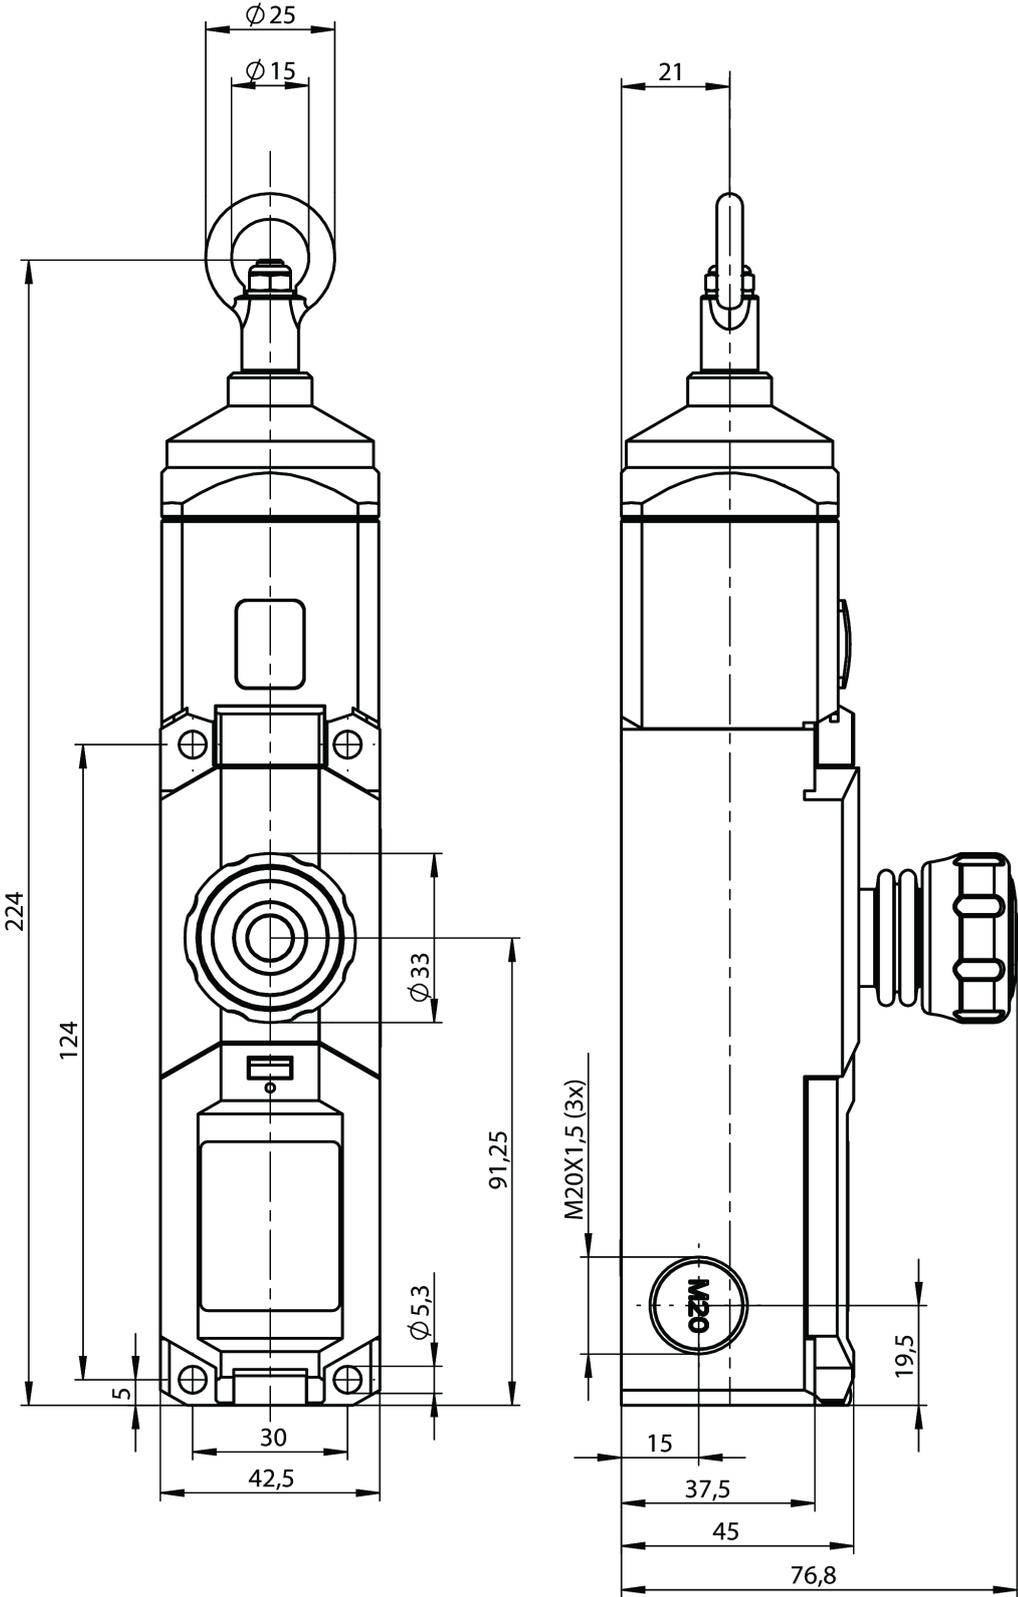## Rope pull switch with pull–to–reset button for EMERGENCY STOP device, pull lug

- ▸ Plastic housing
- ▸ Emergency stop device with detent mechanism as per EN ISO 13850 and EN 60947–5–5
- ▸ Rope clamp for pull wire
- ▸ Indication of correct rope tension
- ▸ 3 cable entries M20 x 1.5
- ▸ Switching elements with 4 switching contacts
- ▸ Blue reset button

Switching element

2131 Slow–action switching contact 3 NC ⊖+ 1 NO

Dimensional drawings

Connection examples