


Residential Fuse Panel Inserts

Trims

Residential Fuse Panel Insert Trims

- ◆ Doors are die formed with sloping sides and rounded corners and permanently mounted to the trim.
- ◆ Semi concealed hinges. ①
- ◆ Includes circuit directory card and self adhesive clear plastic directory holder.
- ◆ Painted ASA61 light grey baked on enamel.
- ◆ Mounting hardware included. ②
- ◆ Trims are custom sized larger than the existing trim and door.
- ◆ Mounting holes located to line up with existing box holes. ③

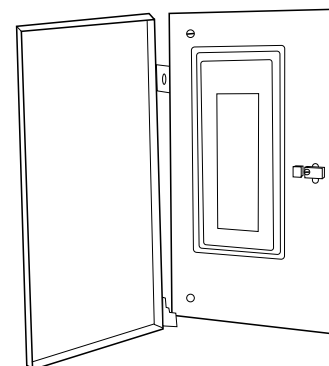

Product Selection

Table 76. Fuse Panel Insert Trims

Original Manufacturer	Fuse Panel Catalogue Number	Box Dimensions			Replacement Trim Catalogue Number	Trim Size (Inches)		Replacement Interior Catalogue Number	Trim Mounting Holes (Inches)	
		Height	Width	Depth		Height	Width		Height	Width
Amalgamated	4112	16-1/8	8-1/2	2-15/16	QLPT16D	18-1/4	9-3/4	CQLP8100	16-1/6	4
Amalgamated	4116	19-1/2	8-1/2	2-15/16	QLPT19D	20-7/8	9-3/4	CQLP8100	18-11/16	4
Amalgamated	4120	22-7/8	8-1/2	2-15/16	QLPT22AD	25	10-1/2	CQLP12100 ④	22-1/4	6
Amalgamated	4208	16-1/8	8-1/2	2-15/16	QLPT16AD	18-1/4	10-5/16	CQLP8100	15-1/2	6
Amalgamated	4212	19-1/2	8-1/2	2-15/16	QLPT20AD	20-7/8	9-3/4	CQLP8100	18-11/16	6
Amalgamated	4216	22-7/8	8-1/2	2-15/16	QLPT22AD	25	10-1/2	CQLP12100 ④	22-1/4	6
Amalgamated	4220	24-1/8	8-1/2	2-15/16	QLPT24D	26	9-3/4	CQLP12100 ④	23-13/16	4
Amalgamated	4312	22-7/8	8-1/2	2-15/16	QLPT22AD	25	10-1/2	CQLP12100 ④	22-1/4	6
CEB	NHP10-636-3 ⑤	24	10	3	QLPT24LD	26	12	CQLP12100 ④	23-13/16	4
CEB	NHP12-60	20	7-3/4	3	QLPT20D	21-3/4	9-3/4	CQLP12100 ④	19-9/16	4
CEB	NHP12-633	23	7-3/4	3	QLPT24D	26	9-3/4	CQLP12100 ④	23-13/16	4
CEB	NHP4-632	16-1/4	7-3/4	3	QLPT16D	18-1/4	9-3/4	CQLP8100	16-1/6	4
CEB	NHP6-633	20	7-3/4	3	QLPT19D	20-7/8	9-3/4	CQLP8100	18-11/16	4
CEB	NHP6-636-4	24	7-3/4	3	QLPT24D	26	9-3/4	CQLP12100 ④	23-13/16	4
CEB	NHP8-60	16-1/8	7-3/4	3	QLPT16D	18-1/4	9-3/4	CQLP8100	16-1/6	4
CEB	NHP8-635-3	23	7-3/4	3	QLPT24D	26	9-3/4	CQLP12100 ④	23-13/16	4
Taylor (CrouseHinds)	NHP6-30-60	21	7-3/8	3	QLPT20D	21-3/4	9-3/4	CQLP12100 ④	19-9/16	4
Taylor (CrouseHinds)	NHP20-1231	24-1/2	9-1/2	3	QLPT24D	26	9-3/4	CQLP12100 ④	23-13/16	4
Taylor (CrouseHinds)	NHP20-0821-6	24-1/2	9-1/2	3	QLPT24D	26	9-3/4	CQLP12100 ④	23-13/16	4
Taylor (CrouseHinds)	NHP12B-1000-2	17-1/8	9-1/2	3	QLPT16AD	18-1/8	10-5/16	CQLP8100	15-1/2	6
Taylor (CrouseHinds)	NHP10-0401-4	17-1/8	9-1/2	3	QLPT16AD	18-1/8	10-5/16	CQLP8100	15-1/2	6
Taylor (CrouseHinds)	NHP10-0601-2	17-1/8	9-1/2	3	QLPT16AD	18-1/8	10-5/16	CQLP8100	15-1/2	6
Taylor (CrouseHinds)	NHP10-0611	17-1/8	9-1/2	3	QLPT16AD	18-1/8	10-5/16	CQLP8100	15-1/2	6
Taylor (CrouseHinds)	NHP10-0801	17-1/8	9-1/2	3	QLPT16AD	18-1/8	10-5/16	CQLP8100	15-1/2	6
Taylor (CrouseHinds)	NHP12-0811	19-1/4	9-1/2	3	QLPT22AD	25	10-1/2	CQLP12100 ④	22-1/4	6
Taylor (CrouseHinds)	NHP14-0801-4	19-1/4	9-1/2	3	QLPT22AD	25	10-1/2	CQLP12100 ④	22-1/4	6
Taylor (CrouseHinds)	NHP14-0621-2	19-1/4	9-1/2	3	QLPT22AD	25	10-1/2	CQLP12100 ④	22-1/4	6

① If the main service entrance is bottom entry the door hinges left. If it is top entry then the door hinges right.

② Measure the existing box holes locations as they may be part of the end walls, side walls, or tapped into a box flange.

③ The hardware supplied will accommodate boxes that are mounted up to 1/2" too deep or equal to 3-1/2" net depth.

④ Panel insert CQLP8100 can also be used with this size trim.

⑤ For box sizes either 26" or 27-1/2" high no insert or trim is available..